GLASS AND MIRRORS

COLORED GLASS

COLORED GLASS is a rear lacquered glass according to the RAL single color spectrum. In the "ON" position, the COLORED GLASS allows to display almost 100% of the monitor system's brightness, permitting best picture quality with brilliant colors to transmit. When in the "OFF" position, the **ad notam** monitor system appears in the glass as a black area.

The COLORED GLASS is designed for combination with the **ad notam** monitor systems and fullfills the necessary surface, hardness, and tension qualities.

The position of the image area within the glass surface is freely selectable. The flexibility is only limited by the outline dimensions of the **ad notam** monitor system which need to be considered when installing the monitor system on the backside of the glass.


Please use the **ad notam** glass orderform as appendix to your purchase order to supply data and to indicate the desired RAL color code.

ad notam recommends to use the "Optiwhite" type when lacquering with a light color is desired as due to the nature of the glass a slight derivation from the RAL color can occur when using standard "Float" glass.

COLORED GLASS with "Antireflect" type is anti-glared on both sides and therefore allows less than 1% reflexion at all. **ad notam** recommends to use the "Antireflect" type in environments with much influence of light.



ARTICLE NO.

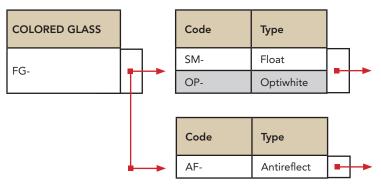


Code	Thickness	Туре	
005 R	5mm	Standard	
007 R LSG	6.38mm	Laminated Safety Glass	

Code	Thickness	
006 R	6mm	

GLASS AND MIRRORS

COLORED GLASS

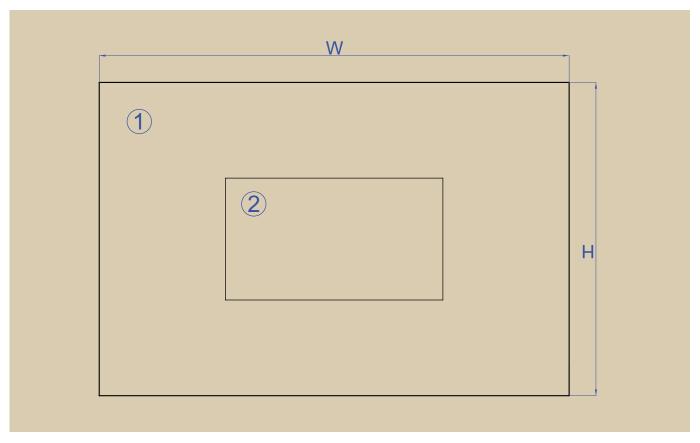



Thickness in mm	max. W in mm	max. H in mm	Weight per m²
5	3150	2000	12.5 kg
6	3005	1900	15.0 kg
6.38	3150	2000	15.95 kg

2 IMAGE AREA Combinable monitor system sizes:

Image Area	min.	max.
Size (inch)	13.3"	82.0"

Optical Characteristics Tolerances Application Characteristics If the difference between ordered a) The specified glass is suitable in a) ad notam recommends to use the dimensions and actual received moist areas but for indoor use only! "Optiwhite" type when lacquering with product is exceeding 2mm in a light color is desired as due to the b) The standard implementation is not nature of the glass a slight derivation measurements of H & W, the material is usable in public facilities or at public from the RAL color can occur when defective. In this case the glass may be places. Applications in these using standard "Float" glass. exchanged. surroundings have to be implemented with laminated safety glass (LSG). b) ad notam recommends to use the Please consider this with your order or "Antireflect" type in environments with **Cleaning Note** planning. much influence of light. a) Do not use any rubbing or caustic c) Installation & mounting guidelines for glass have to be considered! b) Use only a clean and dust-free cloth, On demand authorized retailers can be by using a customary glass detergent! supported with training records! c) Consider the material specification!